

BRIDGE ELEVATIONS

Use this information as an approximation only. Always slow down and use caution and make sure you have adequate clearance before proceeding under bridge. The bridge clearance is dependant on water surface elevation. Clearances are given in feet. Also take into account the prevailing winds and upper river flows which can effect the water elevations in different areas on the lake, so please check the water levels link on the left side of the front page of our website or for more information you can call (601)992-9703 before attempting to go under bridges.

Normal summer pool 297.5

Normal winter pool 296.0

Location	Bottom of bridge	Bridge clearance @ normal summer pool
Center of Highway 43	308.5	11.0
Twin Harbor	305.7	8.2
Northbay	306.5	9.0
Pelahatchie Bay		
North side center looking east from main lake	308.0	10.5
South side center looking east from main lake	308.5	11.0